

Check valve SR2720/SR2850

Application : The steering racks SR2720/SR2850 are exceptionally supplied without the check valve fitted in the high pressure port. This part needs to be removed from the old steering rack, cleaned and reused when fitting the remanufactured steering rack.



The steering rack on the above picture is a SR2720. The only difference between SR2720 and SR2850 (= later models) is the shape of the pinion. The check valve is the same and needs to be reused when not pre-fitted from us.

When removing the valve, please make sure not to damage the rubber seal.